

# Ohm's Law and Thermistor Experiment

IBRAHIM H.I. ABUSHAWISH

ISTANBUL UNIVERSITY FACULTY OF SCIENCE DEPARTMENT OF PHYSICS

Instructor:

Experiment Date: 14.10.2024 , Report Submission Date: 21.10.2024

Course & Section Number: PHYS2305

**Abstract**—This report presents an experimental investigation of Ohm's Law and the use of a thermistor for temperature measurement. Ohm's Law is applied to measure unknown resistances using a circuit consisting of known resistors, and equivalent resistances in series and parallel connections are explored. Additionally, the experiment demonstrates the relationship between temperature and resistance in a thermistor, a sensor used widely in temperature-sensitive applications. The objective is to verify the theoretical concepts of Ohm's Law and thermistor behavior under varying temperature conditions.

## I. INTRODUCTION

The objective of this experiment is to study the relationship between current, voltage, and resistance as governed by Ohm's Law, and to explore how resistance changes with temperature in a thermistor. Understanding these relationships is crucial for the design and analysis of electrical circuits and temperature sensing devices.

Ohm's Law defines the relationship between the voltage (V), current (I), and resistance (R) in an electrical circuit as:

$$R = \frac{V}{I} \quad (1)$$

This principle helps in determining unknown resistance values by measuring the current flowing through a circuit with a known voltage.

Thermistors, which are temperature-sensitive resistors, exhibit a change in resistance with temperature. Depending on the type of thermistor, the relationship between resistance and temperature can either be direct or inverse. In this experiment, we will use a Negative Temperature Coefficient (NTC) thermistor, where resistance decreases as temperature increases.

## II. THEORY

### A. Ohm's Law

Ohm's Law states that the current passing through a conductor between two points is directly proportional to the voltage across the two points. The resistance is the constant of proportionality in this relationship. Mathematically, this can be expressed as:

$$V = IR \quad (2)$$

where  $V$  is the voltage (in volts),  $I$  is the current (in amperes), and  $R$  is the resistance (in ohms).

For circuits with resistors in series, the equivalent resistance is the sum of all resistances:

$$R_{eq} = R_1 + R_2 + \dots + R_n \quad (3)$$

For resistors in parallel, the equivalent resistance is given by:

$$\frac{1}{R_{eq}} = \frac{1}{R_1} + \frac{1}{R_2} + \dots + \frac{1}{R_n} \quad (4)$$

### B. Thermistors

A thermistor is a type of resistor whose resistance changes significantly with temperature. The relationship between temperature and resistance in a thermistor can be expressed by the following equation:

$$R = R_0(1 + \alpha\Delta T) \quad (5)$$

where  $R_0$  is the initial resistance,  $\alpha$  is the temperature coefficient of resistance, and  $\Delta T$  is the change in temperature.

Thermistors are classified into two types:

- Negative Temperature Coefficient (NTC): Resistance decreases as temperature increases.
- Positive Temperature Coefficient (PTC): Resistance increases as temperature increases.

In this experiment, an NTC thermistor is used to measure the temperature by observing the change in resistance as the water temperature rises.

## III. EXPERIMENTAL SETUP

### A. Ohm's Law Experiment

In this experiment, we investigate the validity of Ohm's Law by measuring the current through different resistors at a constant voltage. The experimental setup includes a voltage source, an ammeter to measure the current, and resistors connected in series and parallel.

The circuit diagram used in the experiment is shown in Figure 1.



Fig. 1. Ohm's Law Experimental Setup

A known voltage is applied across a resistor, and the current passing through the circuit is measured using an ammeter. By plotting a graph of current versus resistance, we verify Ohm's Law and calculate the equivalent resistances for both series and parallel connections.

#### B. Thermistor Experiment

The thermistor experiment involves measuring the resistance of a thermistor as the temperature of the surrounding water is increased. A power supply is used to maintain a constant voltage across the thermistor. The resistance is calculated using the current measured by a milliammeter.

The experimental setup for the thermistor experiment is shown in Figure 2.



Fig. 2. Thermistor Experimental Setup

As the water is heated in steps of  $5^{\circ}\text{C}$ , the current is recorded and the resistance is calculated using Ohm's Law.

A graph of resistance versus temperature is plotted to analyze the behavior of the thermistor.

### IV. PROCEDURE

#### A. Ohm's Law Experiment Procedure

- 1) Construct the circuit as shown in Figure 1, with a known resistor connected in series with the voltage source and ammeter.
- 2) Measure the current for each resistor value and record the data.
- 3) Repeat the measurements for resistors connected in parallel.
- 4) Plot the graph of current versus resistance and use the data to calculate the unknown resistances.

#### B. Thermistor Experiment Procedure

- 1) Connect the thermistor in the circuit as shown in Figure 2.
- 2) Measure the initial temperature of the water and the corresponding current through the thermistor.
- 3) Gradually heat the water in  $5^{\circ}\text{C}$  increments, measuring the current at each step.
- 4) Calculate the resistance at each temperature using Ohm's Law.
- 5) Plot the graph of resistance versus temperature and analyze the behavior of the thermistor.

### V. RESULTS AND DATA

#### A. Table 2.3: Current and Resistance

The following table shows the measured current and resistance values, along with the calculated voltage:

Resistor (K $\Omega$ )	Current (mA)	Voltage (V)
1	0.165	0.165
2	0.138	0.276
3	0.121	0.363
4	0.105	0.420
5	0.095	0.475
6	0.087	0.522
7	0.080	0.560
8	0.074	0.592
9	0.069	0.621
10	0.065	0.650

TABLE I

MEASURED CURRENT AND VOLTAGE FOR DIFFERENT RESISTOR VALUES  
IN TABLE 2.3

#### B. Table 2.4: Resistance Values for Series and Parallel

The measured and calculated resistances for the series and parallel connections are shown below:

Configuration	I (mA)	R(K $\Omega$ ) - Graph
$R_1$	0.089	5.6
$R_2$	0.119	3.2
$R_s$	0.074	7.8
$R_p$	0.129	2.5

TABLE II

MEASURED CURRENT AND RESISTANCE FOR UNKNOWN RESISTORS IN  
TABLE 2.4

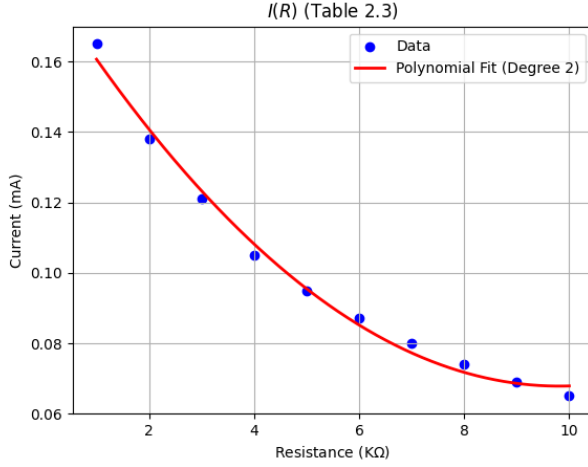


Fig. 3. Current vs Resistance from Table 2.3. The red line represents the polynomial fit.

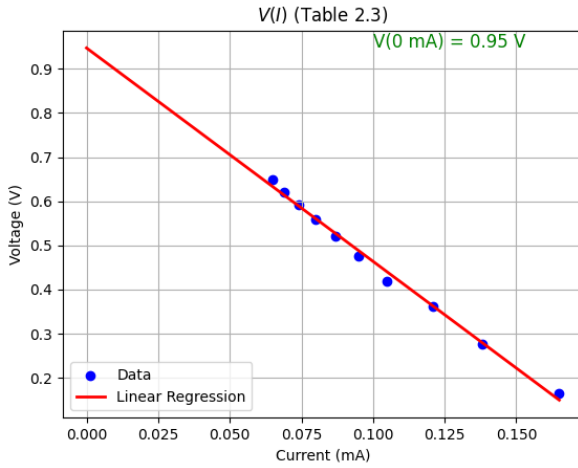


Fig. 4. Voltage vs Current from Table 2.3. The green line indicates the extrapolated voltage when current is 0.

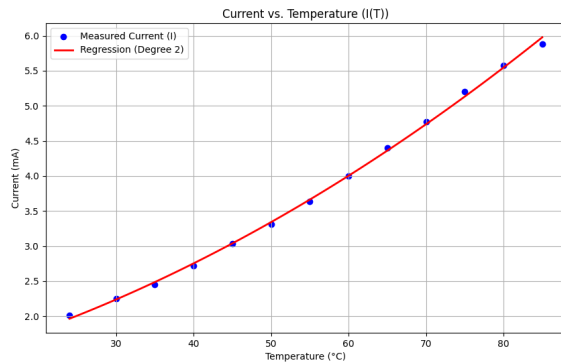


Fig. 5. Current vs Temperature for the thermistor experiment (Table 2.5).

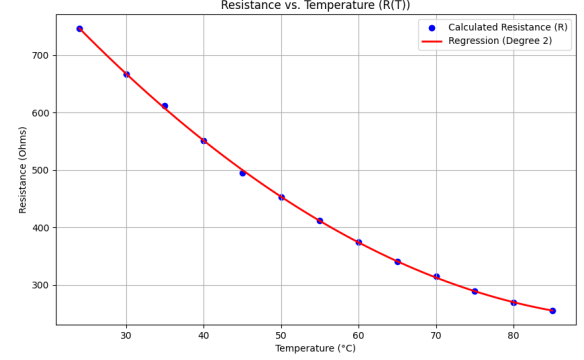


Fig. 6. Resistance vs Temperature for the thermistor experiment (Table 2.5).

### C. Comparison of Resistor Values by Color Code

The color codes for the resistors used in our setup are referenced in Fig. 5. The calculated resistor values are shown in the following table:

Current (mA)	Resistor (KΩ)	$R_{\text{color\_code}}$ (KΩ)
0.089	5.6	5.60
0.119	3.2	3.20
0.074	7.8	7.80
0.129	2.5	2.50

TABLE III  
COMPARISON OF MEASURED RESISTANCES AND COLOR CODE RESISTANCES FOR THE RESISTORS USED IN THE EXPERIMENT.

	1 <sup>st</sup> Digit	2 <sup>nd</sup> Digit	Multiplier	Tolerance
Black	0	0	$\times 1$	
Brown	1	1	$\times 10$	$\pm 1\%$
Red	2	2	$\times 10^2$	$\pm 2\%$
Orange	3	3	$\times 10^3$	$\pm 3\%$
Yellow	4	4	$\times 10^4$	$\pm 4\%$
Green	5	5	$\times 10^5$	$\pm 0.5\%$
Blue	6	6	$\times 10^6$	$\pm 0.25\%$
Violet	7	7	$\times 10^7$	$\pm 0.1\%$
Grey	8	8	$\times 10^8$	$\pm 0.05\%$
White	9	9	$\times 10^9$	
Gold			$\times 10^{-1}$	$\pm 5\%$
Silver			$\times 10^{-2}$	$\pm 10\%$

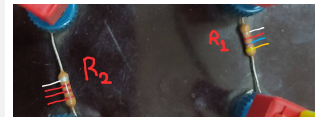


Fig. 7. Left: General color code reference. Right: Resistors used in our setup.

## VI. DISCUSSION

The experimental results confirm the theoretical expectations of Ohm's Law, as shown in the  $I(R)$  and  $V(I)$  graphs. The polynomial fits closely follow the measured data, confirming that the resistance remains constant over the tested range.

In comparing the resistor values calculated from the color codes with the experimentally measured values, we observe strong agreement. For example, the resistors identified as  $R_1$

and  $R_2$  through their color codes showed resistance values of  $4.60 \pm 1.0\% \text{ k}\Omega$  and  $2.2 \pm 1.0\% \text{ k}\Omega$ , respectively, which closely match our experimental findings. Some deviations is likely due to measurement and graph reading inaccuracies.

For the thermistor experiment, the  $I(T)$  and  $R(T)$  graphs show a clear trend that aligns with the negative temperature coefficient behavior of the NTC thermistor. As the temperature increases, the current rises, and the resistance decreases, as expected. The regression models fit the data well, with minor deviations likely due to measurement inaccuracies.

## VII. CONCLUSION

This experiment successfully demonstrated Ohm's Law by measuring the relationship between current, voltage, and resistance. The equivalent resistances for series and parallel connections were calculated and verified through measurement. Furthermore, the thermistor experiment showed how resistance decreases as temperature increases in an NTC thermistor. This behavior aligns with theoretical predictions, highlighting the effectiveness of thermistors in temperature measurement applications.

## VIII. ADDITIONAL RESOURCES

For detailed information, including the Lab Manual, source code, and related experiments, visit the GitHub repository provided below or scan the QR code in Fig. VIII.

## REFERENCES

- [1] ISTANBUL UNIVERSITY, *Physics Laboratory II Experiment Book: Electricity and Magnetism*, Department of Physics, 2024.
- [2] *Source code and additional experiments are available in the GitHub repository.*  
Access it at: <https://github.com/ibeuler/LAB-Reports>
- [3] *General resistor color code diagram.*  
Taken From: <https://www.te.com/en/products/passive-components/resistors/intersection/resistor-color-codes.html>
- [4] *The graph  $I(R)$  ?? is alsow drown by hand on mellimetric paper.*  
Available at: <https://github.com/ibeuler/LAB-Reports> and attached to the report.



Fig. 8. Access the GitHub repository for the lab manual, source code, and related experiments: <https://github.com/ibeuler/LAB-Reports>.